


Mount Designed for Dell OptiPlex Micro Instruction Manual

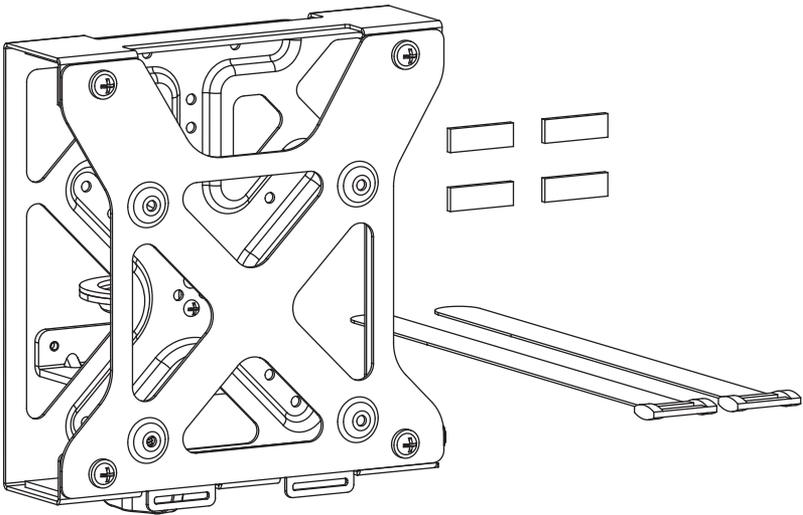

SKU: MOUNT-DLMM1



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/mount-dlmm1>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303

⚠ WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.

⚠ WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS



A (x1)
Mounting Plate



B (x1)
Locking Plate



C (x1)
Clamp



D (x2)
Cable Strap



E (x4)
Pads



S-A (x1)
Thumscrew



S-B (x2)
M4x6mm
Screw



S-C (x8)
M4x10mm
Screw



S-D (x4)
M5x6mm
Screw



S-E (x4)
M4 Washer



S-F (x4)
M4 Nut



S-G (x4)
M5 Washer

TOOLS NEEDED




Phillips
Screwdriver

DO NOT EXCEED WEIGHT CAPACITY.
Failure to do so may result in serious injury.


5lbs
(2.4kg)

ASSEMBLY OPTIONS:

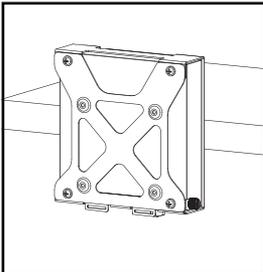


Desk Clamp
pg. 3-5

Allows micro PC to clamp to a desktop surface with a thickness of 10mm to 50mm.

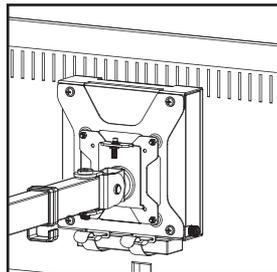

**VESA Plate
Monitor Arm**
pg. 6-8

Mount installs between monitor and monitor mount arm.

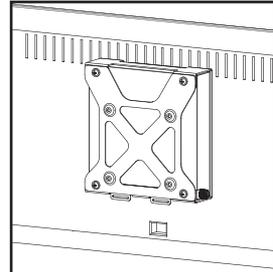

**VESA Plate
Freestanding Monitor**
pg. 9-11


Utilizes VESA holes in freestanding monitor to hold micro PC

ASSEMBLY OPTION A: Desk Clamp

STEP 1

For Desktops with a 10mm to 40mm Thickness:

Disassemble Clamp (C) using a Phillips screwdriver. Turn Lower Clamp (C1) upside and reassemble Clamp (C) as shown below.

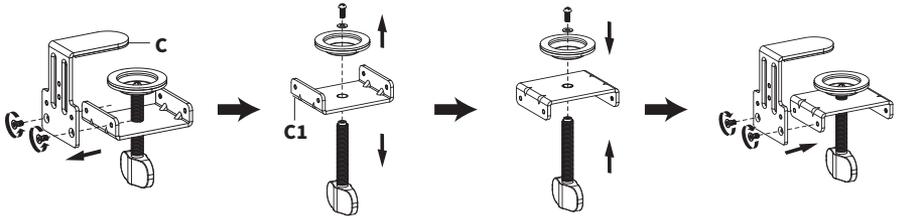


*For Desktops with a 15mm to 50mm Thickness:

Proceed to Step 2.


STEP 2

Choose desired mounting orientation and connect Mounting Plate (A) to back side of Clamp (C) at desired height using M4x6mm Screws (S-B) and a Phillips screwdriver.

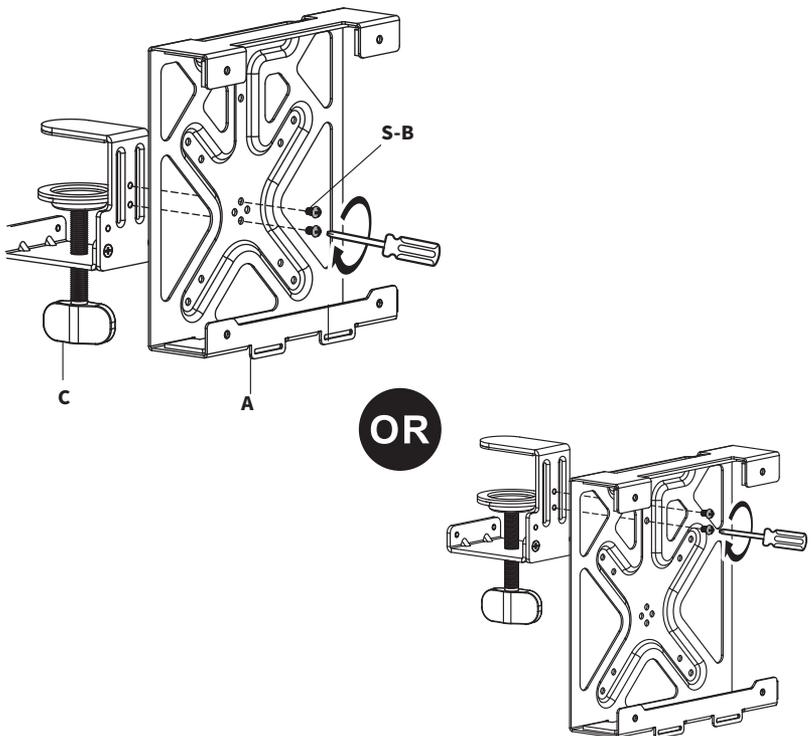


STEP 3

Secure Locking Plate (B) to back side of Mounting Plate (A) using M5x6mm Screws (S-D), M5 Washer (S-G), and a Phillips screwdriver.

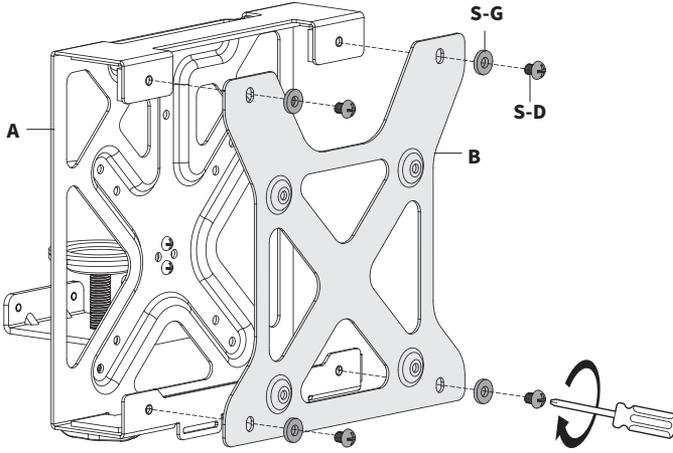


STEP 4

Place assembly onto desktop and tighten hand bolt to secure.

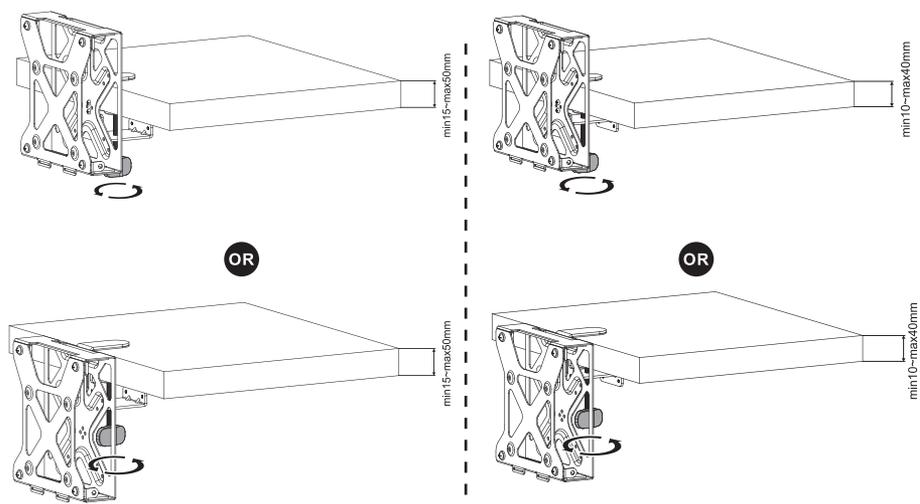


STEP 5

Attach Pads **(E)** to the PC to protect against accidental damage, then securely place the PC into the mount. Secure using Thumbscrews **(S-A)**.

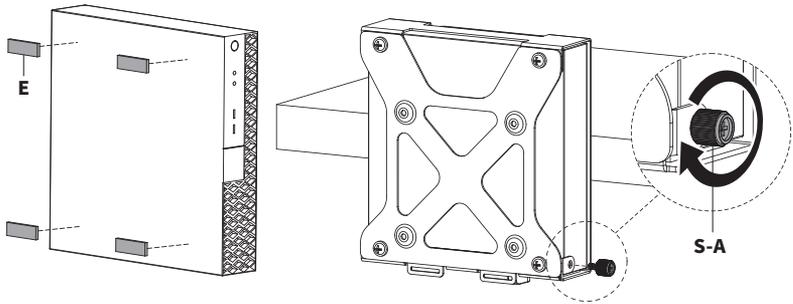


Attach Cable Straps **(D)** to slots on underside of assembled mount to secure charging cord power brick.

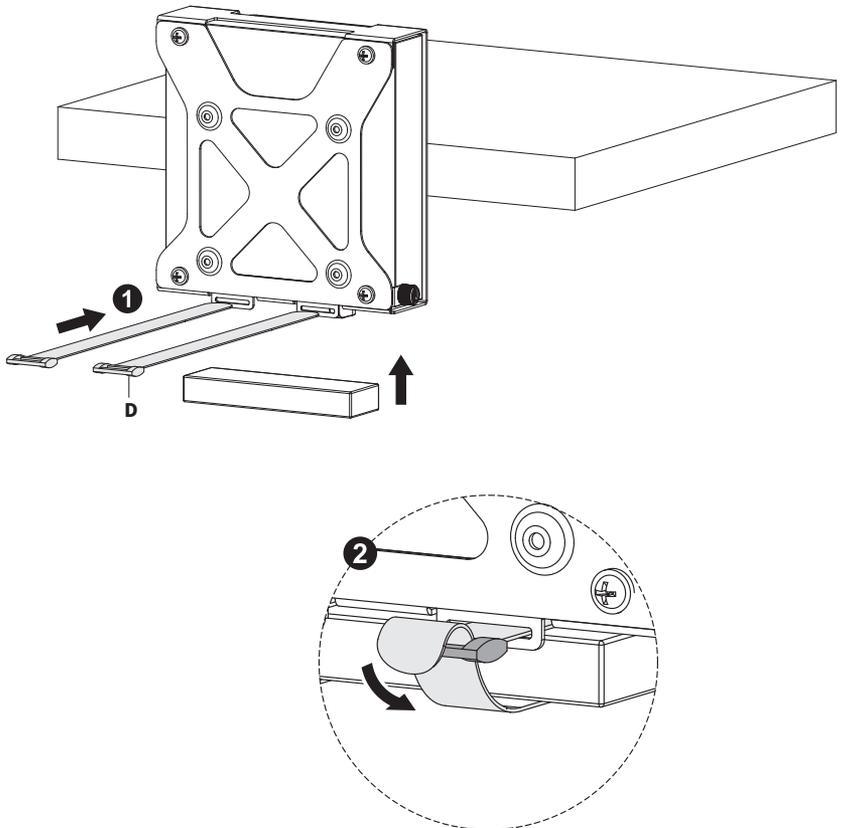

ASSEMBLY OPTION B: VESA Plate - Monitor Arm


STEP 1

Secure Mounting Plate **(A)** to VESA holes on the back of the monitor using M4x10mm Screws **(S-C)** and M4 Washers **(S-E)** and a Phillips screwdriver.

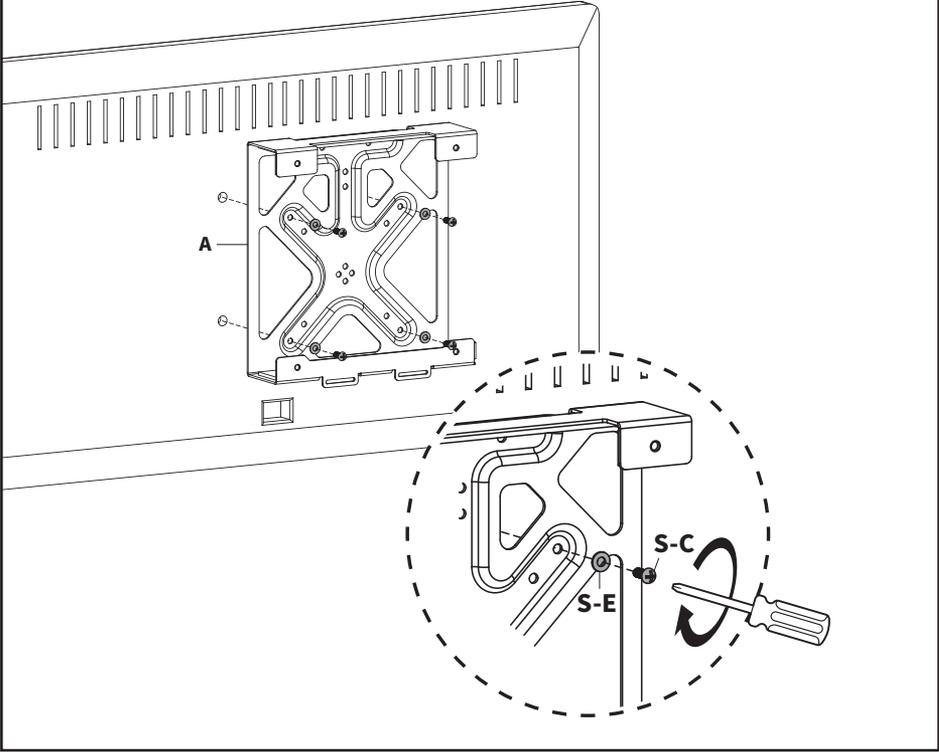


STEP 2

Attach Locking Plate **(B)** to the front side of the VESA Plate from your monitor mount using M4x10mm Screws **(S-C)**, M4 Nuts **(S-F)** and a Phillips screwdriver.

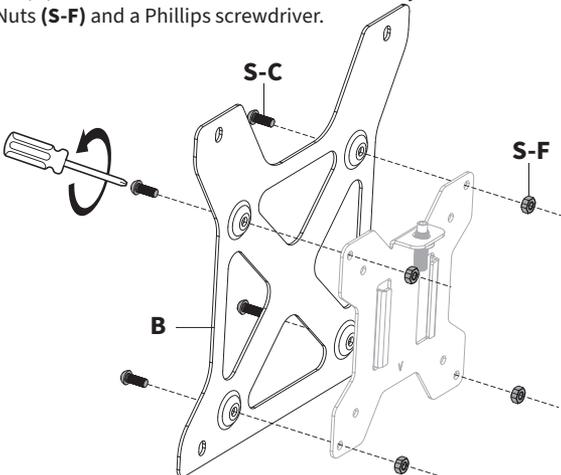


STEP 3

Secure Locking Plate (**B**) to Mounting Plate (**A**) using M5x6mm Screws (**S-D**), M5 Washers (**S-G**), and a Phillips screwdriver.

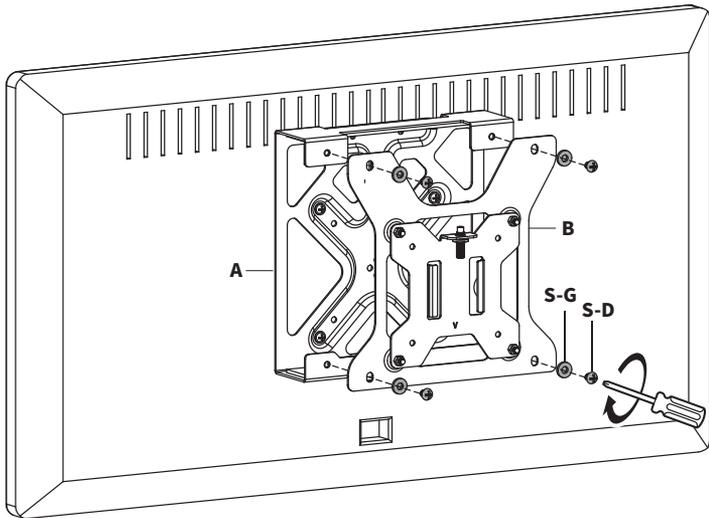


STEP 4

Attach Pads (**E**) to the PC to protect against accidental damage, then securely place the PC into the mount. Secure using Thumbscrews (**S-A**).

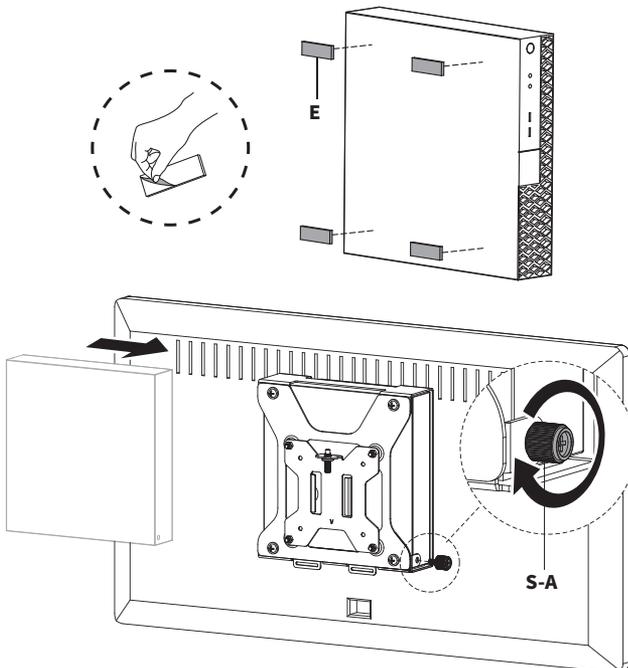


STEP 5

Attach Cable Straps (**D**) to slots on underside of assembled mount to secure charging cord power brick.

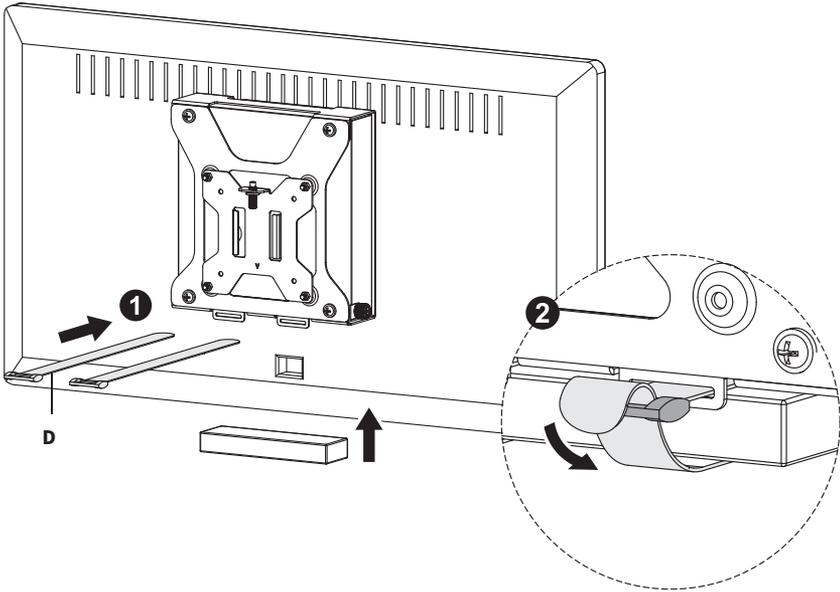


Secure VESA plate to monitor mount using manufacturer guidelines.

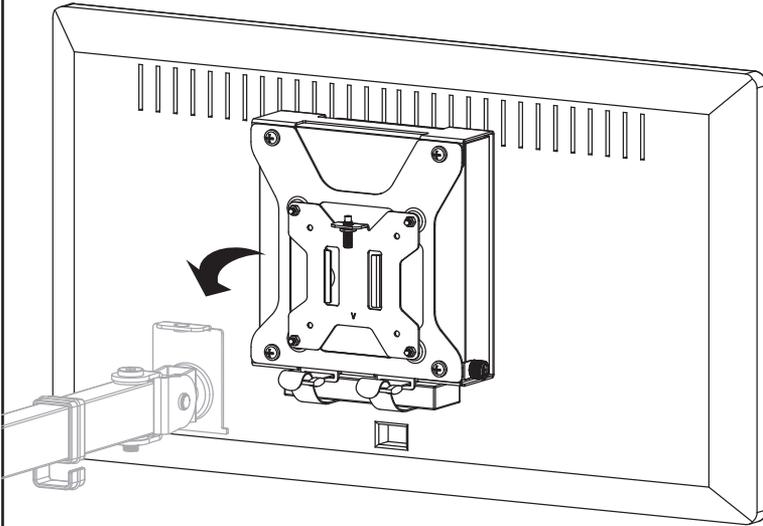


ASSEMBLY OPTION C: VESA Plate - Freestanding Monitor

STEP 1

Secure Mounting Plate **(A)** to VESA holes on the back of the monitor using M4x10mm Screws **(S-C)** and M4 Washers **(S-E)** and a Phillips screwdriver.


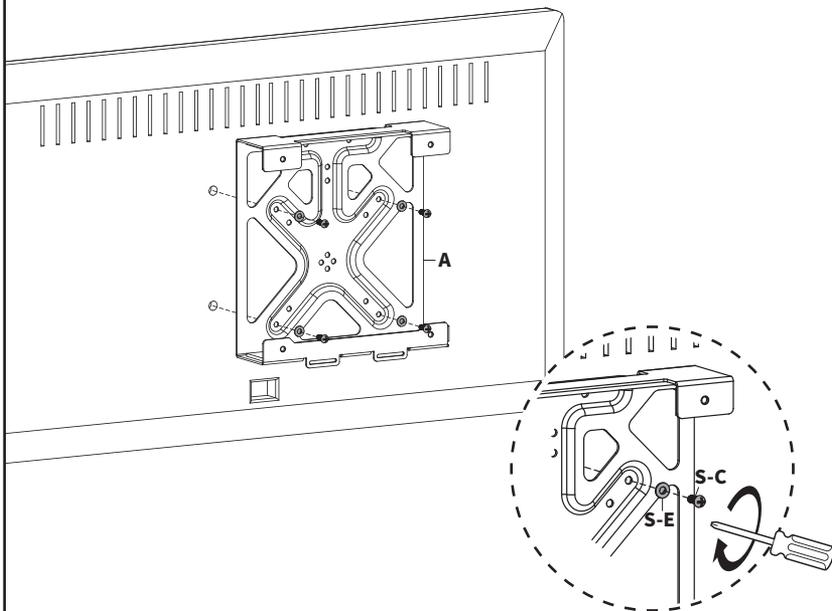


Secure Locking Plate **(B)** to Mounting Plate **(A)** using M5x6mm Screws **(S-D)**, M5 Washers **(S-G)**, and a Phillips screwdriver.

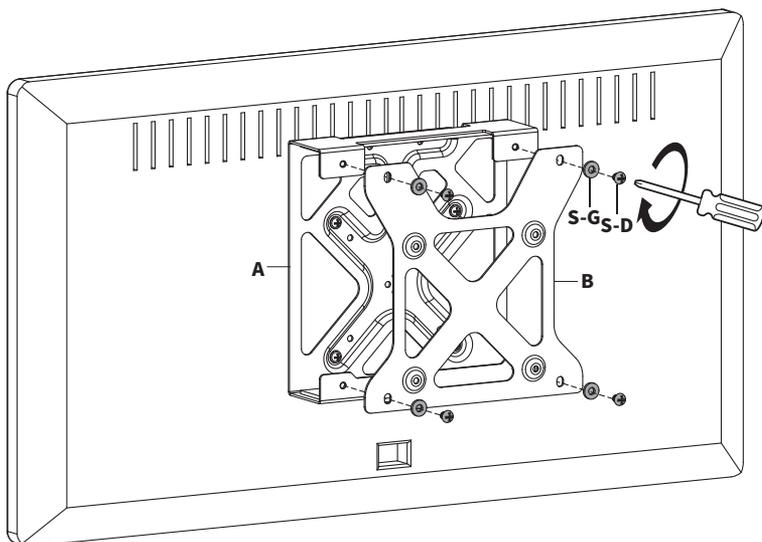



STEP 2

Attach Pads (**E**) to the PC to protect against accidental damage, then securely place the PC into the mount. Secure using Thumbscrews (**S-A**).

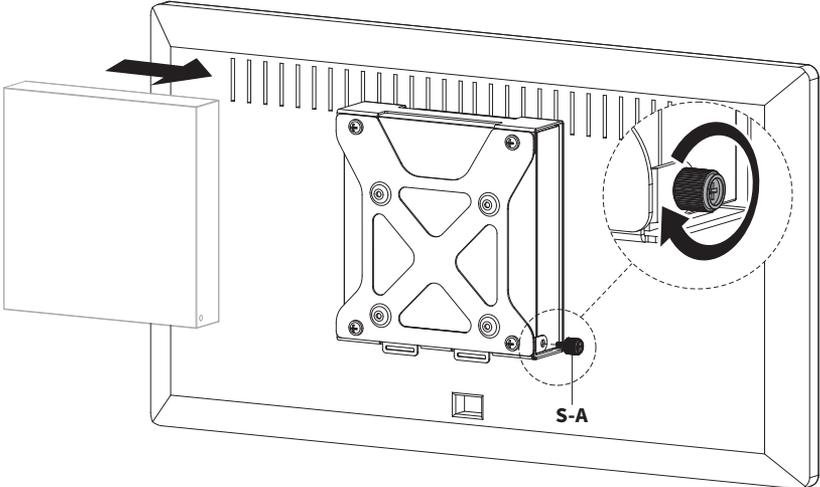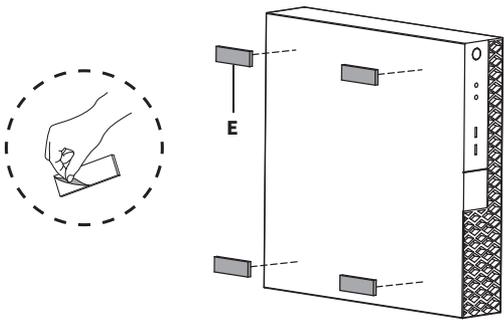

STEP 3

Attach Cable Straps (**D**) to slots on underside of assembled mount to secure charging cord power brick.

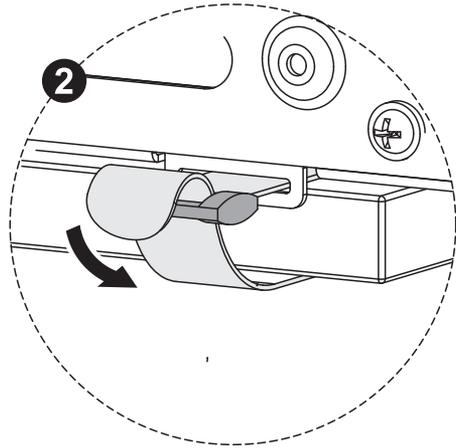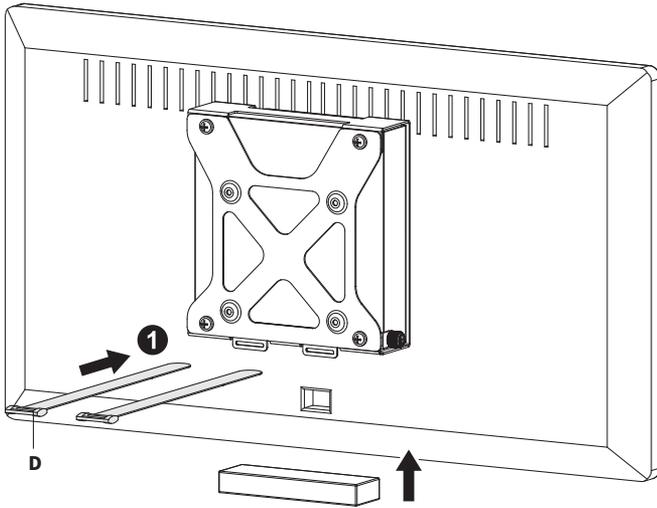



Love your new VIVO setup and want to share?
Tag us in your photo! [@vivo_us](#)

LAST UPDATED: 07/07/2023
REV1



Open **Monday - Friday 7:00am - 7:00pm** CST,
our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**



help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

FOR MORE VIVO PRODUCTS, CHECK OUT OUR WEBSITE AT: www.vivo-us.com